



simmer
stew serve



Cookware™

The cookware range offers a variety of presentation opportunities to demonstrate the delights of oven to table cooking.



Casserole
0337 3 litre 5¼pt. (104oz)
0338 Lid 3 litre
0334 2 litre 3½pt. (75oz)
0335 Lid 2 litre



Salad Bowl
0461 23.0cm (9")



Soup Bowl
0828 42.5cl (15oz)
 Covered
 Complete
0829 Cover for Soup
 Bowl
B828 Soup Bowl Base
 Only 42.5cl
 (15oz)



Presentation Pan
0866 25.5cm (10")
 96.0cl (33½oz)



Oblong Roaster
0331 35.5cm x 30.5cm
 (14" x 12")
 356.0cl (125oz)
0342 30.5cm x 25.5cm
 (12" x 10")
 227.0cl (80oz)



Rectangular Tray
0366 16.5cm x 12.3cm
 (6½" x 4¾")
 50.0cl (17½oz)



Round Eared Dish
0317 21.5cm (8½")
 78.0cl (27½oz)
0316 19.0cm (7½")
 54.0cl (19oz)
0191 16.5cm (5½")
 18.5cl (6½oz)



Oval Eared Dish
0321 34.0cm x 19.0cm
 (13½" x 7½")
 103.0cl (36½oz)
0320 30.5cm x 17.0cm
 (12" x 6½")
 78.0cl (27½oz)
0319 24.5cm x 13.5cm
 (9½" x 5½")
 36.0cl (12½oz)
0318 20.0cm x 11.0cm
 (8" x 4½")
 18.5cl (6½oz)



Oval Sole Dish
0326 28.0cm x 19.0cm
 (11" x 7½")
 148.0cl (52oz)
0327 21.5cm x 14.0cm
 (8½" x 5½")
 55.0cl (19oz)



Square Roaster
0329 25.5cm (10")
 185.0cl (65oz)



Oval Baker
0400 15.75cm (6¼")
 37.0cl (13oz)



Oval Baker (Lipped)
0328 15.75cm (6¼")
 37.0cl (13oz)



Stacking Bowl
0308 Large 21.0cm
 (8¼") 185.0cl
 (66oz)
0309 Medium 17.0cm
 (6¾") 90.0cl
 (31½oz)
0310 Small 13.0cm
 (5") 39.0cl (13oz)



Butter Block
0332 2.85cl (1oz)
Ramekin
0324 Large 8.4cm (3¼")
 16.0cl (5½oz)
0323 Medium 7.4cm (3")
 11.5cl (4oz)
0322 Small 6.4cm (2½")
 7.0cl (2½oz)



Decanter
0282 1.1ltr (2pts.)
0283 0.6ltr (1pt.)
Oil/Vinegar Jar
0235 17.0cl (6oz)
0237 Stopper Only